

Alternator Product Information:

If Unit Begins With:	Then Unit Is:
ALE-	12V / 40A
ALH-	12V / 55A
ALM-	12V / 30A
ALT-	24V / 50A
ALU-	24V / 70A
ALV-	24V / 100A
ALX-	12V / 70A
ALY-	12V / 60A
ALZ-	12V / 50A
ANG-	24V / 60A
If First Digit After (-) Is:	Then Unit Is:
6	Belt Driven / No Blast Tube
8	Belt Driven / Blast Tube
9	Gear Driven
If Unit Ends With:	Then Unit Is:
LS	New Unit - No Pulley
RS	Factory Rebuilt/Overhauled-No Pulley
G	Ground Strap Attached
R	Factory Rebuilt/Overhauled
None	Factory New - Various Applications

Starter Product Information:

If Unit Begins With:	Then Unit Is:
MCL-	12V
MDB-	24V
MHB-	24V
MHJ-	24V
MHP-	24V
MMU-	24V
MZ-	12V
If Unit Ends With:	Then Unit Is:
R	Factory Rebuilt/Overhauled
None	Factory New